Removing and installing parts of cooling system

Coolant hose connection diagram

Engine codes AAB, ACV, AJA, AJT, AUF, AXL, AYC


Vehicles with engine codes AHY, AXG, AXL=>Page 19-17


- 1. Expansion tank
- 2. Radiator
 - a = top
 b = bottom
- 3. Coolant circulation pump (V50) or continued coolant circulation pump (V51)


 Checking =>Page 19-29

 4. Drain screw, 10 Nm
- 5. Coolant thermostat
- 6. Coolant pump 7. Cylinder block 8. Oil cooler
- 9. Cylinder head

- 10. Solenoid valve
- Only vehicles with optional equipment
 Additional heater
- - Only vehicles with optional equipment
- 12. Control valve
- Only vehicles with optional equipment
- Heating system heat exchanger
 Additional heat exchanger
 - - Only vehicles with optional equipment

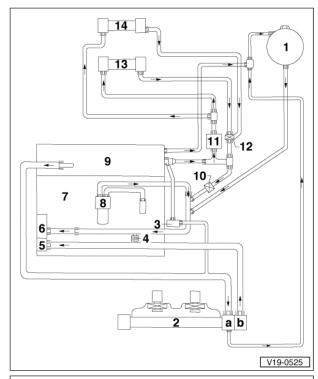

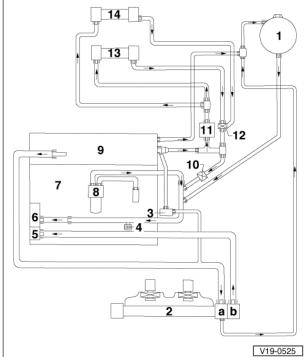

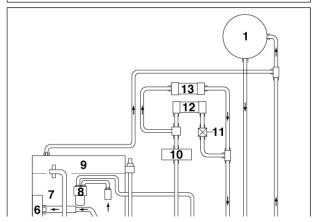

Vehicles with engine codes AHY, AXG, AXL

- 1. Expansion tank
- 2. Radiator
- a = top
 b = bottom

 Continued coolant circulation pump (V51)
- Checking =>Page 19-29

 4. Drain screw, 10 Nm

 5. Coolant thermostat

- Coolant pump
- 7. Cylinder block 8. Oil cooler
- 8. Oil cooler 9. Cylinder head

- 10. Additional heater

 o Only vehicles with optional equipment

 11. Solenoid valve

 o Only vehicles with optional equipment

 12. Heating system heat exchanger

 13. Additional heat exchanger

 o Only vehicles with optional equipment

